ERSATZTEILLISTE
OKIFAX 4500 (FX-051)

SPARE PART LIST
OKIFAX 4500 (FX-051)

Änderungen vorbehalten
Changes without notice

M-OSD-10066-10

Diese Seite bleibt aus technischen Gründen frei.

OKIFAX4500 (FX-051) ASSEMBLY

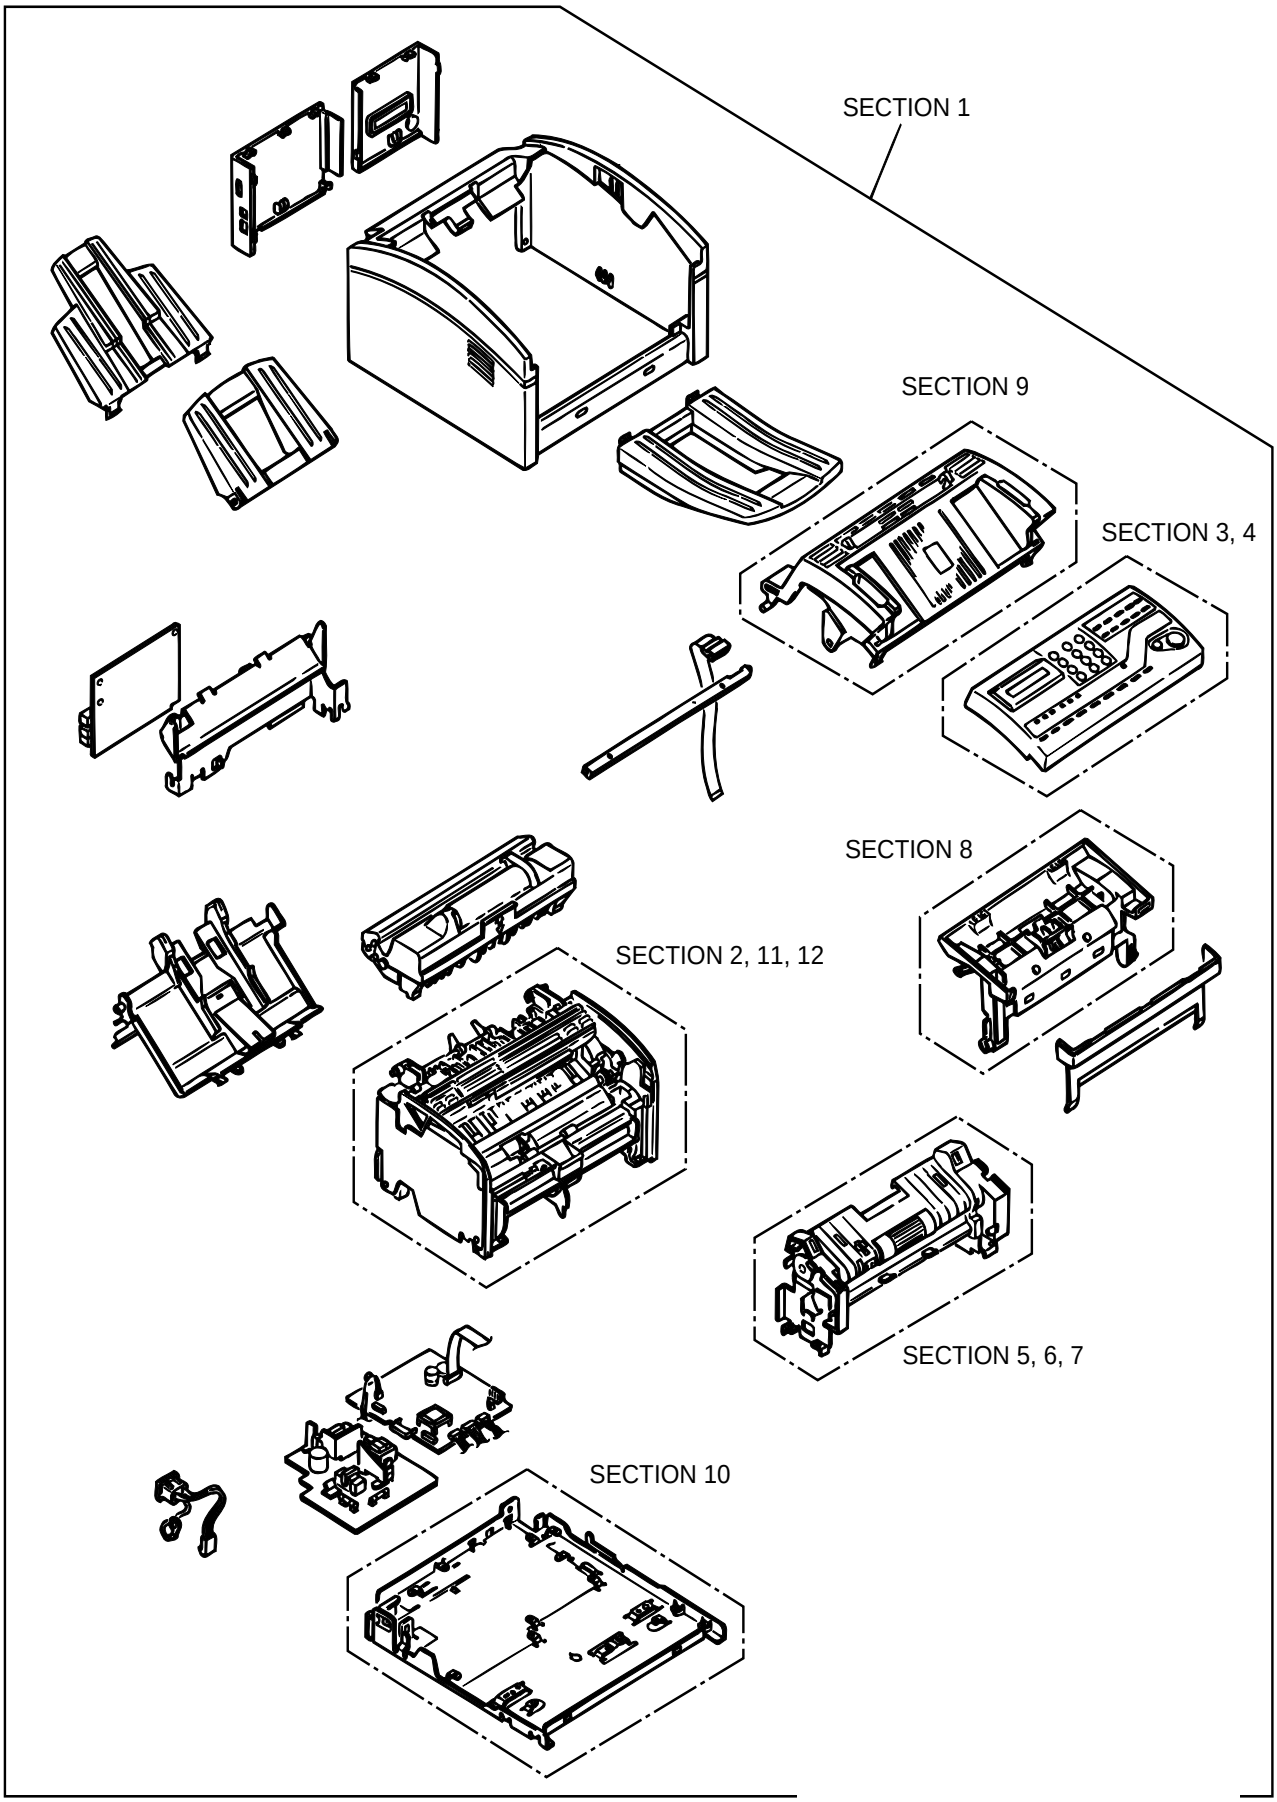

SECTION 1 CABINET ASSEMBLY (FX-051)

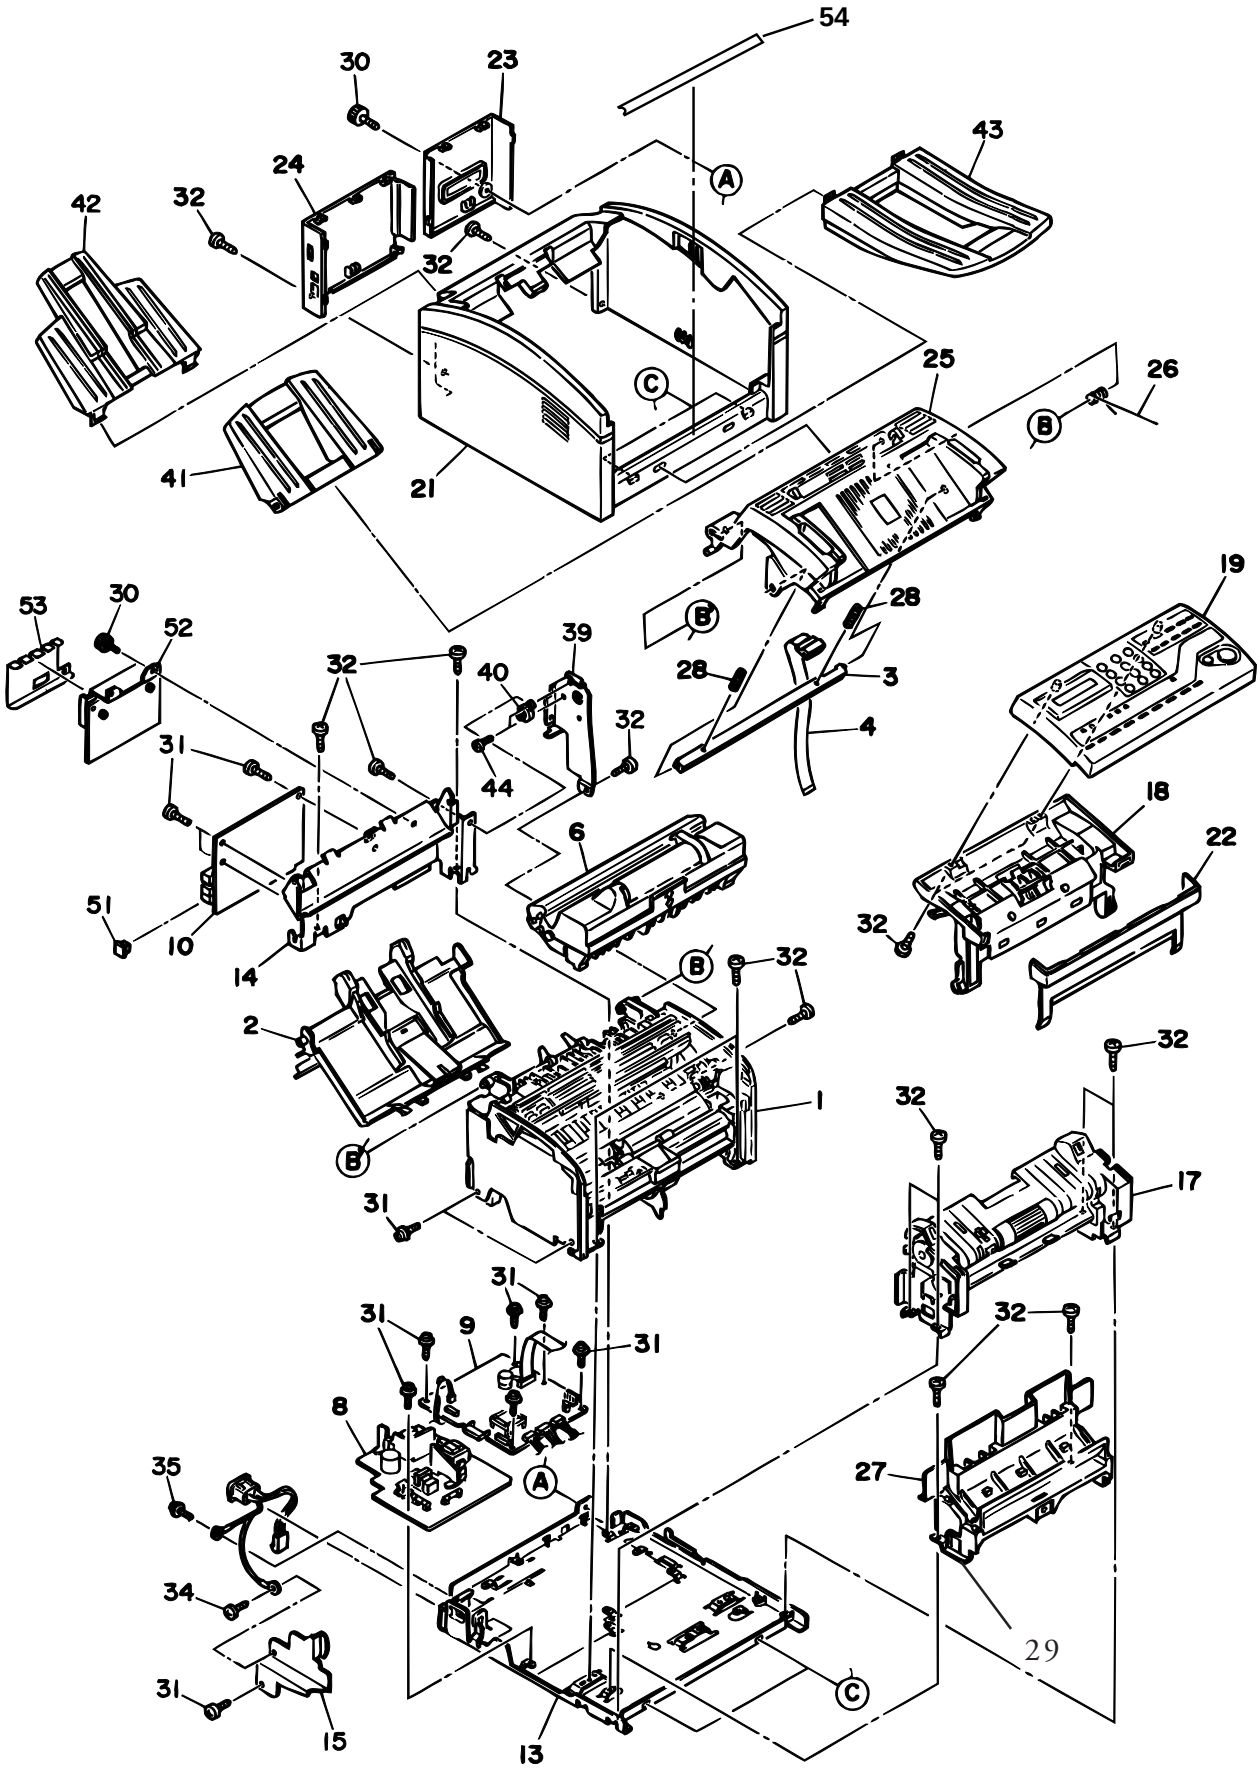

Section 1 CABINET ASSEMBLY (FX-051)

NR.	BEZEICHNUNG	BESTELL-NR.	BEMERKUNG
1	PRINTER UNIT	SIEHE LISTE 11	
2	HOLDER ASSY	SIEHE LISTE 11	
3	LED HEAD	4YA4116-1228G1	
4	FLAT CABLE ASSY	4YX4083-1134G1	
6	EP CARTRIDGE	O P T I O N	
8	POWER SUPPLY UNIT 120V	40588801	120V
	POWER SUPPLY UNIT 230V	40588901	230V
9	R51 BOARD	40687601	
10	FN5 BOARD (UK, FRA)	40044401	
	DN5 BOARD (GER)	40044101	
	WN5 BOARD (SWE)	40044301	
	WN5 BOARD (FINL)	40044302	
	WN5 BOARD (HOL)	40044303	
	WN5 BOARD (IRL)	40044304	
	WN5 BOARD (BEL)	40044308	
	WN5 BOARD (SPAIN)	40044309	
	WN5 BOARD (GREECE)	40044310	
	WN5 BOARD (ITA)	40044312	
	WN5 BOARD (NW)	40044313	
	WN5 BOARD (DEN)	40044314	
11	P6L H.V. BOARD	40605601	
13	BASE PLATE ASSY	40672901	
14	PACKAGE BRACKET	40023901	
15	SHIELD PLATE ASSY	40236401	
17	SCANNER FRAME ASSY, L	0019203	
18	SCANNER FRAME ASSY (U)	40021002	
19	OPERAT. PANEL ASSY, EUROPE	40712201	
21	MAIN COVER	40606501	
	MAIN COVER; BOSCH	4060650	BOSCH
22	FRONT COVER	40025301	
	FRONT COVER; BOSCH	40025302	BOSCH
24	REAR COVER	40606601	
	REAR COVER; BOSCH	40606602	BOSCH
25	TOP COVER ASSY	40672801	
	TOP COVER ASSY	40672802	BOSCH
26	TC SPRING	40026101	
27	PAPER GUIDE (U)	40024001	
28	HEAD SPRING	4PP4083-6168P1	
29	PAPER GUIDE (L)	40024101	
36	LED SHIELD SHEET	40773601	
39	DAMPER BRACKET	40140801	
40	DAMPER GEAR	40148201	
41	DOCUMENT TRAY	40025701	
	DOCUMENT TRAY; BOSCH	40025702	BOSCH
42	PAPER TRAY	40025801	
	PAPER TRAY; BOSCH	40025802	BOSCH

Diese Seite bleibt aus technischen Gründen frei.

Section 1 CABINET ASSEMBLY (FX-051)

NR.	BEZEICHNUNG	BESTELL-NR.	BEMERKUNG
43	DOCUMENT STACKER COVER ASSY	40375801	
	DOC. STACKER ASSY; BOSCH	40375802	BOSCH
50	CARRIER SHEET	NB3201-1211P1	
51	CONNECTOR PLUG TM-6-DC1	223A7010P0003	

SECTION 2 PRINTER UNIT

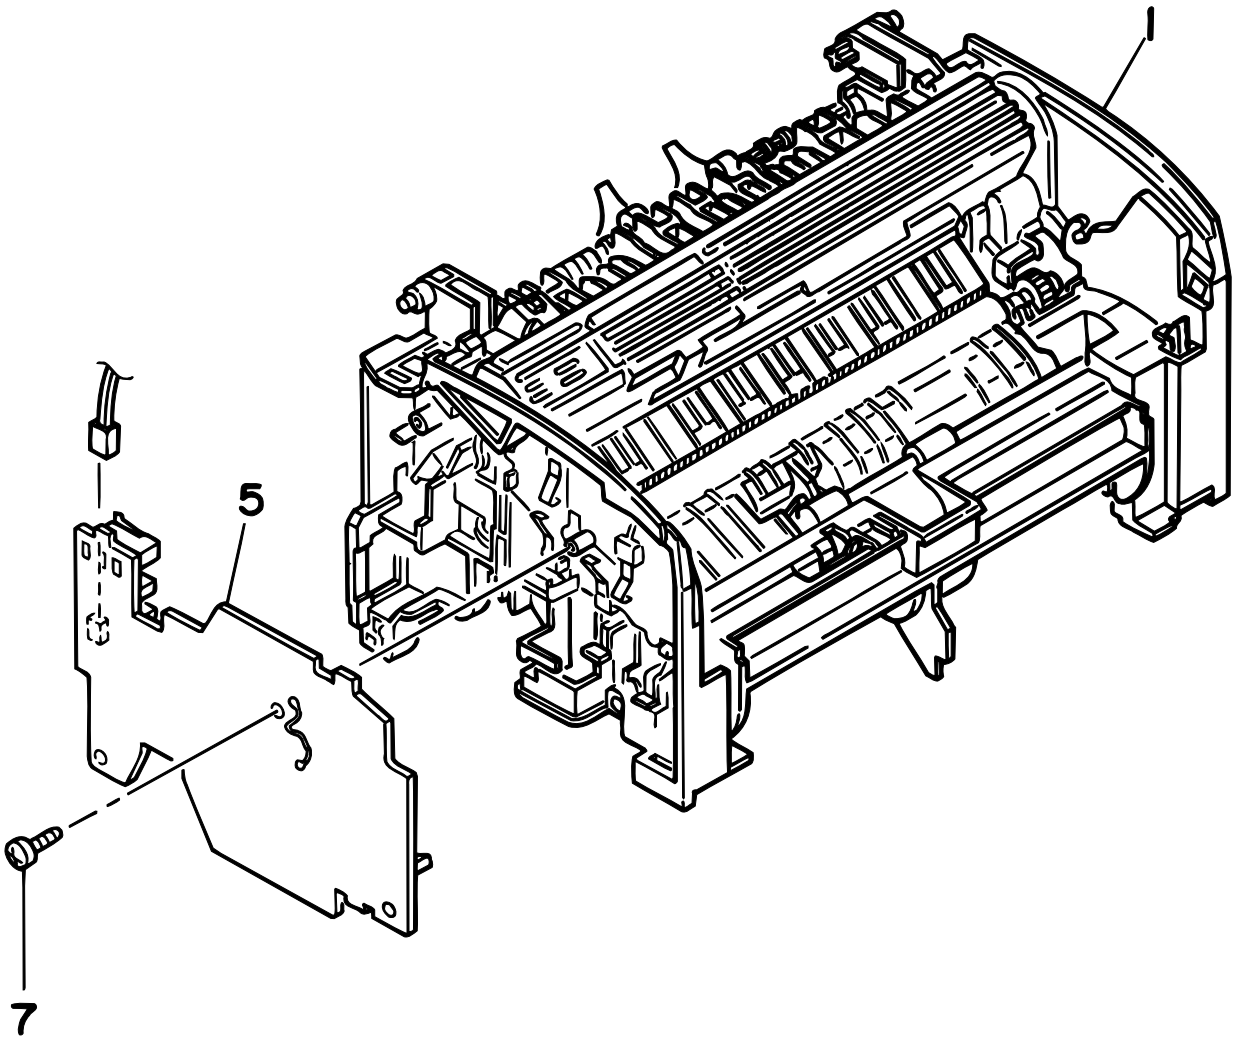

Section 2 PRINTER UNIT

NR.	BEZEICHNUNG	BESTELL-NR.	BEMERKUNG
1	PRINTER UNIT		SIEHE LISTE 11
5	HV PCB ASSY	40607401	
6	HV COVER	40413401	

SECTION 3 OPERATOR PANEL

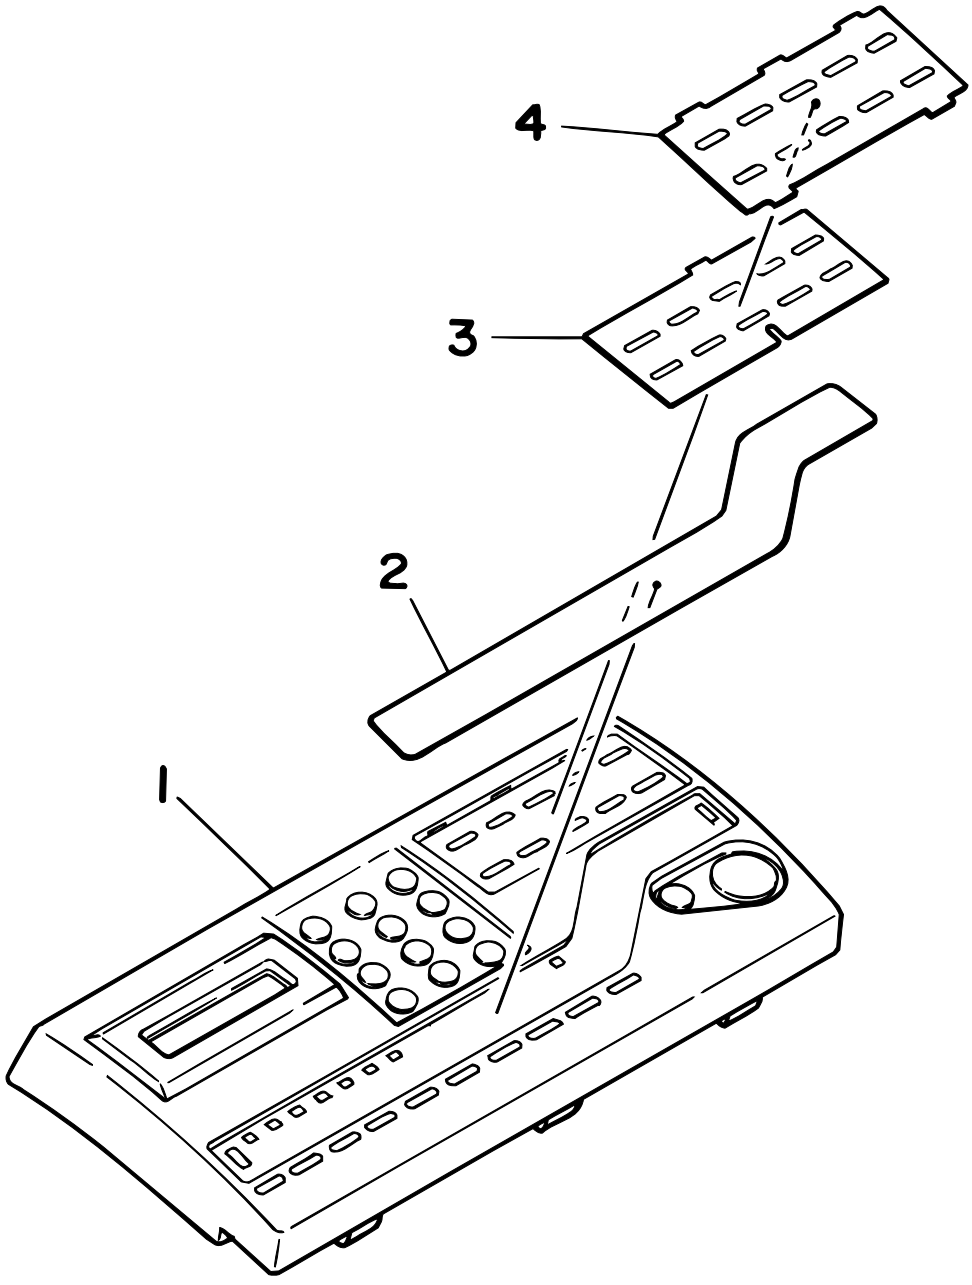

Section 3 OPERATOR PANEL

NR.	BEZEICHNUNG	BESTELL-NR.	BEMERKUNG
1	OP. PANEL ASSY	40712201	
	OP. PANEL ASSY, BOSCH	40712204	BOSCH
2	FUNCTION SHEET, GERMANY	00073311	
	FUNCTION SHEET, OEL	00073313	
	FUNCTION SHEET, ITALY	00073301	
	FUNCTION SHEET, NORWAY	00073302	
	FUNCTION SHEET, DENMARK	00073303	
	FUNCTION SHEET, SWEDEN	00073304	
	FUNCTION SHEET, HOLLAND	00073305	
	FUNCTION SHEET, SPAIN	00073307	
	FUNCTION SHEET, FRANCE	00073312	
3	ONE TOUCH SHEET, GERMANY	00073411	
	ONE TOUCH SHEET, OEL	00073413	
	ONE TOUCH SHEET, ITALY	00073401	
	ONE TOUCH SHEET, NORWAY	00073402	
	ONE TOUCH SHEET, DENMARK	00073403	
	ONE TOUCH SHEET, SWEDEN	00073404	
	ONE TOUCH SHEET, HOLLAND	00073405	
	ONE TOUCH SHEET, SPAIN	00073407	
	ONE TOUCH SHEET, FRANCE	00073412	
4	COVER SHEET	40023601	

SECTION 4 OPERATOR PANEL ASSY

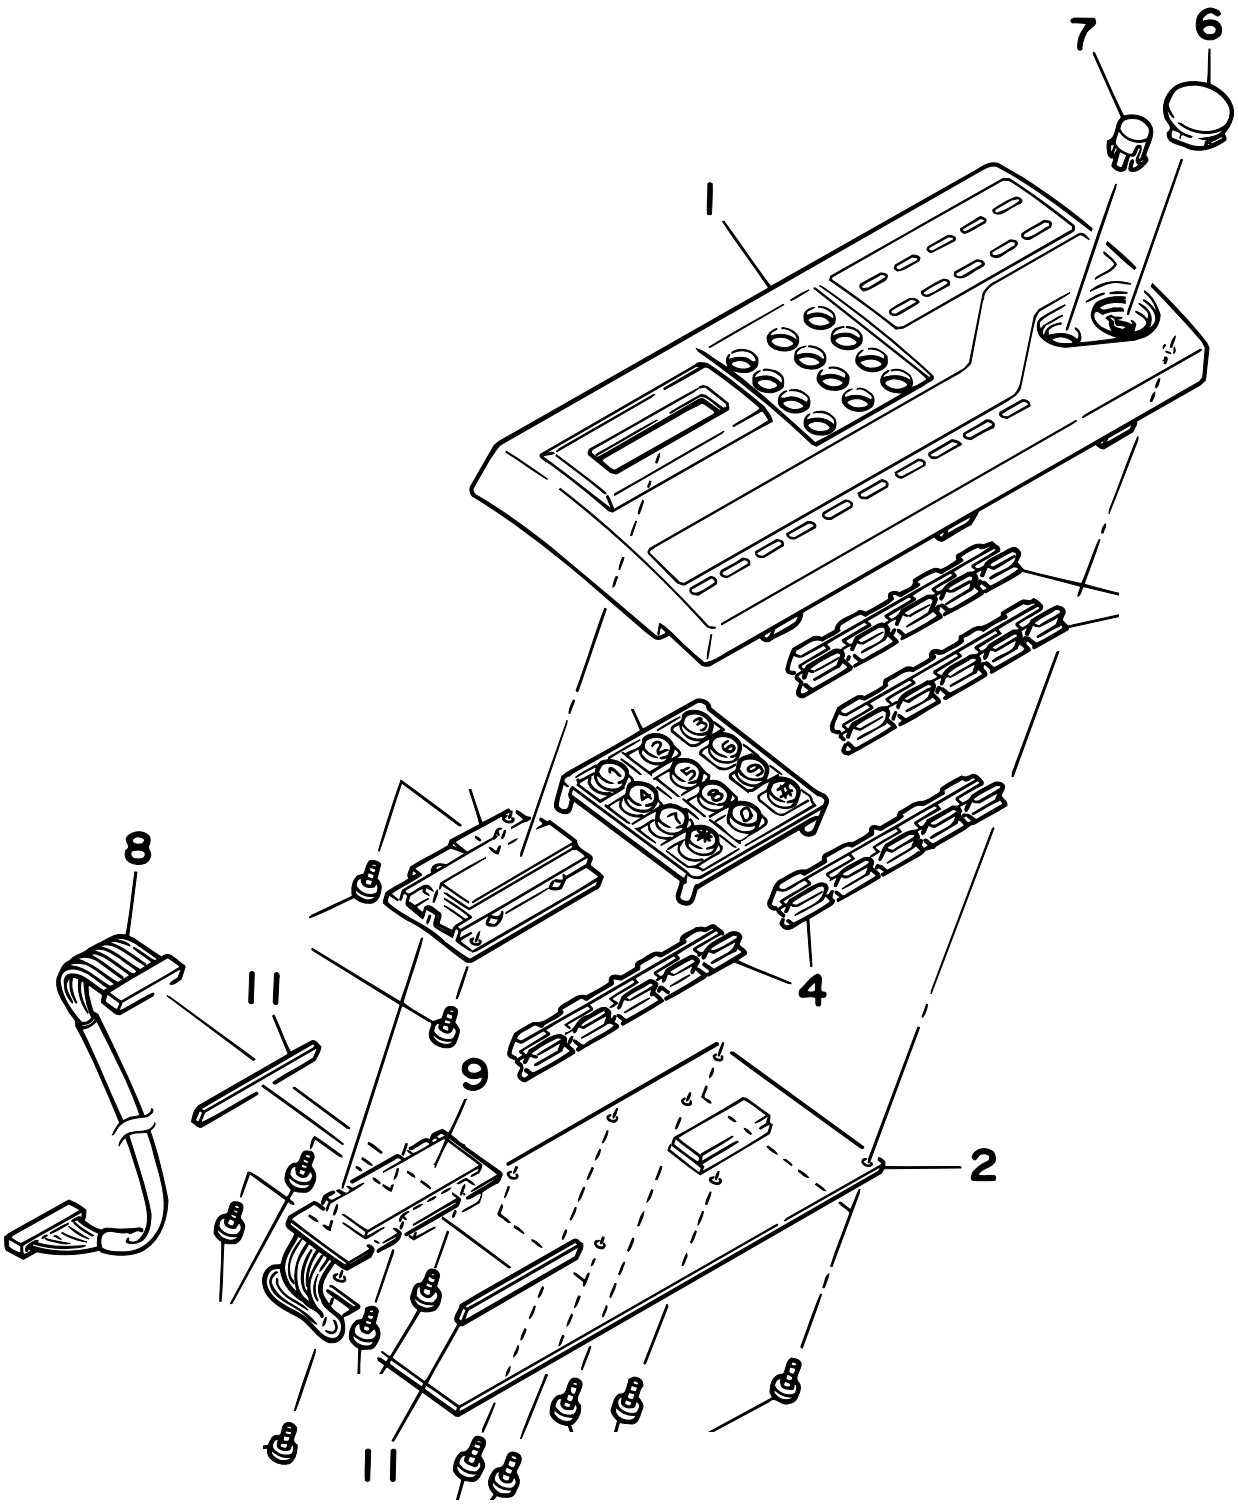

Section 4 OPERATOR PANEL ASSY

NR.	BEZEICHNUNG	BESTELL-NR.	BEMERKUNG
2	04W BOARD	40086701 307	
5	TEN KEY (ROUND)	3PP4120-1067P1	
6	START BUTTON	40023201	
7	STOP BUTTON	40023301	
9	LCD	4YB4134-1009P001	
11	RUBBER CONNECTOR	4PB4120-1113P001	

SECTION 5 SCANNER FRAME ASSEMBLY (L)

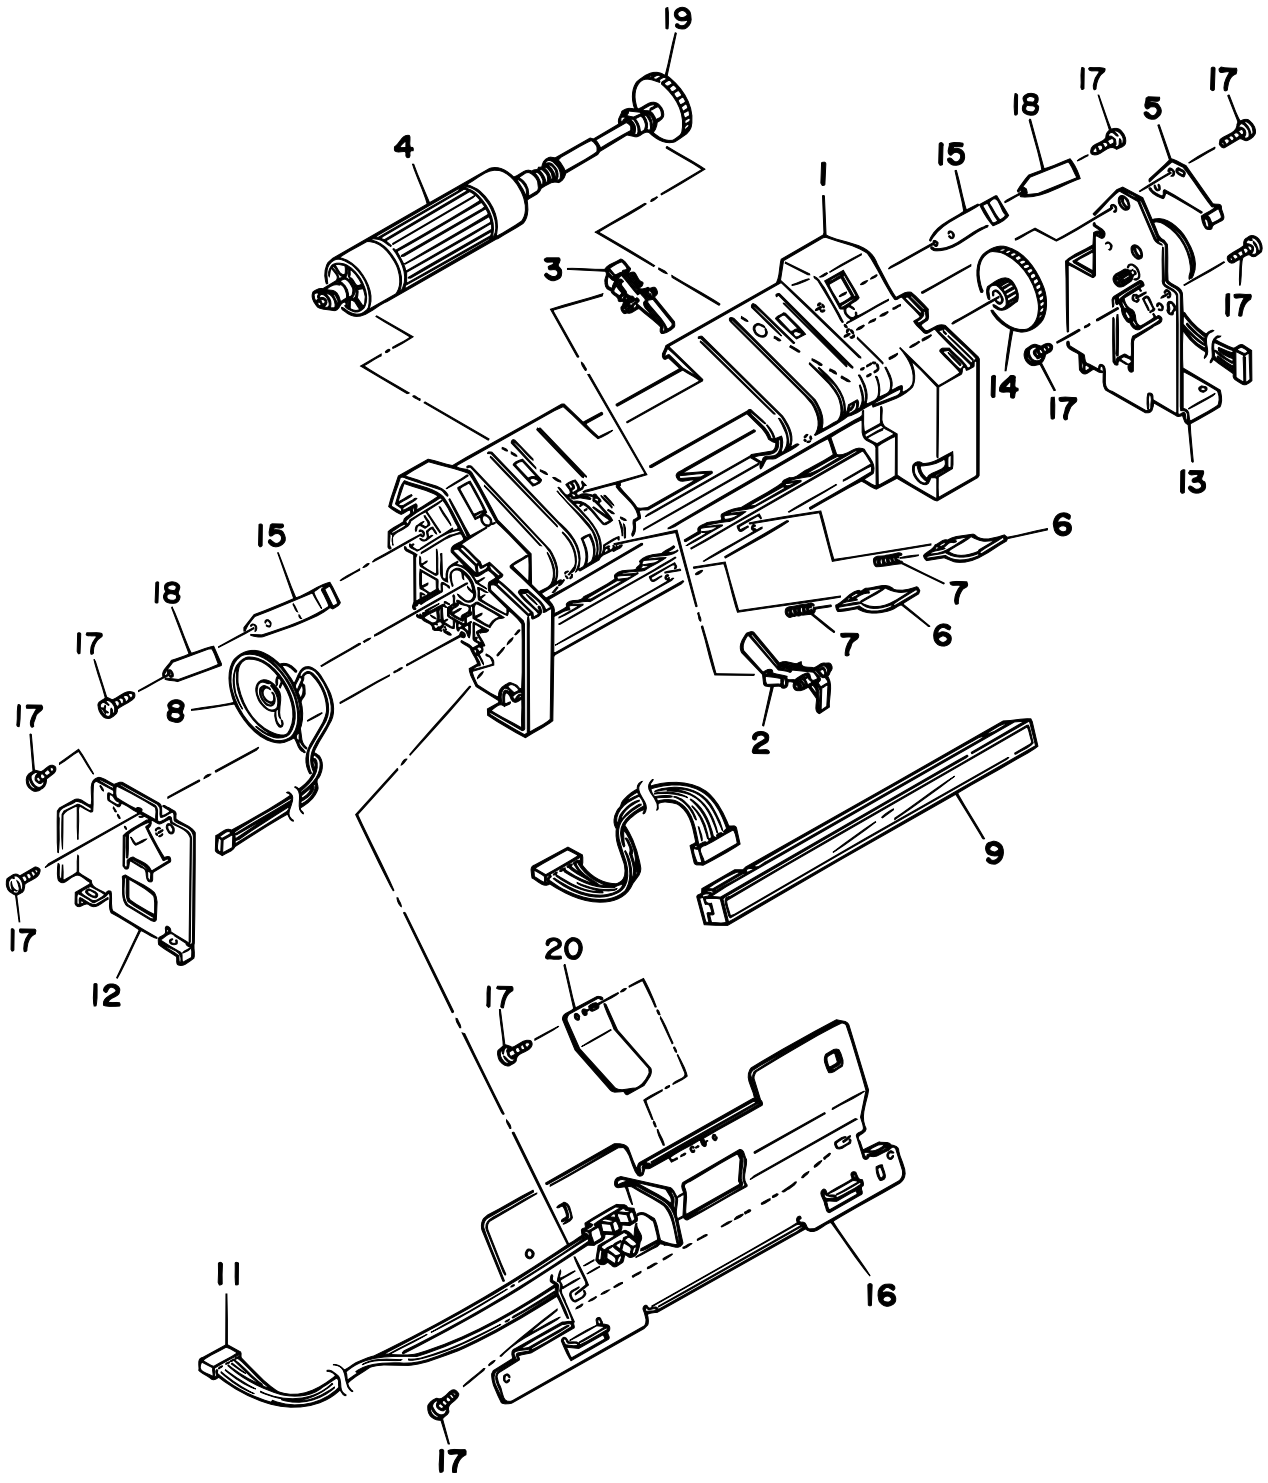

Section 5 SCANNER FRAME ASSEMBLY (L)

NR.	BEZEICHNUNG	BESTELL-NR.	BEMERKUNG
2	PC1 LEVER	40019401	
3	PC2 LEVER	40019501	
4	ADF ROLLER ASSY	40019601	
5	ADF EARTH PLATE	40020201	
6	EXIT PIECE	40020601	
7	EXIT SPRING	40020701	
8	SPEAKER CONN. CORD	40127501	
9	CONTACT IMAGE SENSOR	40141401	
10	FILM GUIDE	40644701	
14	GEAR Z95/14	40020301	
15	LATCH SPRING	40020501	
18	REINFORCEMENT SPRING	40153801	
19	GEAR Z38	40025201	
20	CIS SPRING	40024501	

SECTION 6 SCANNER PLATE ASSEMBLY (B)

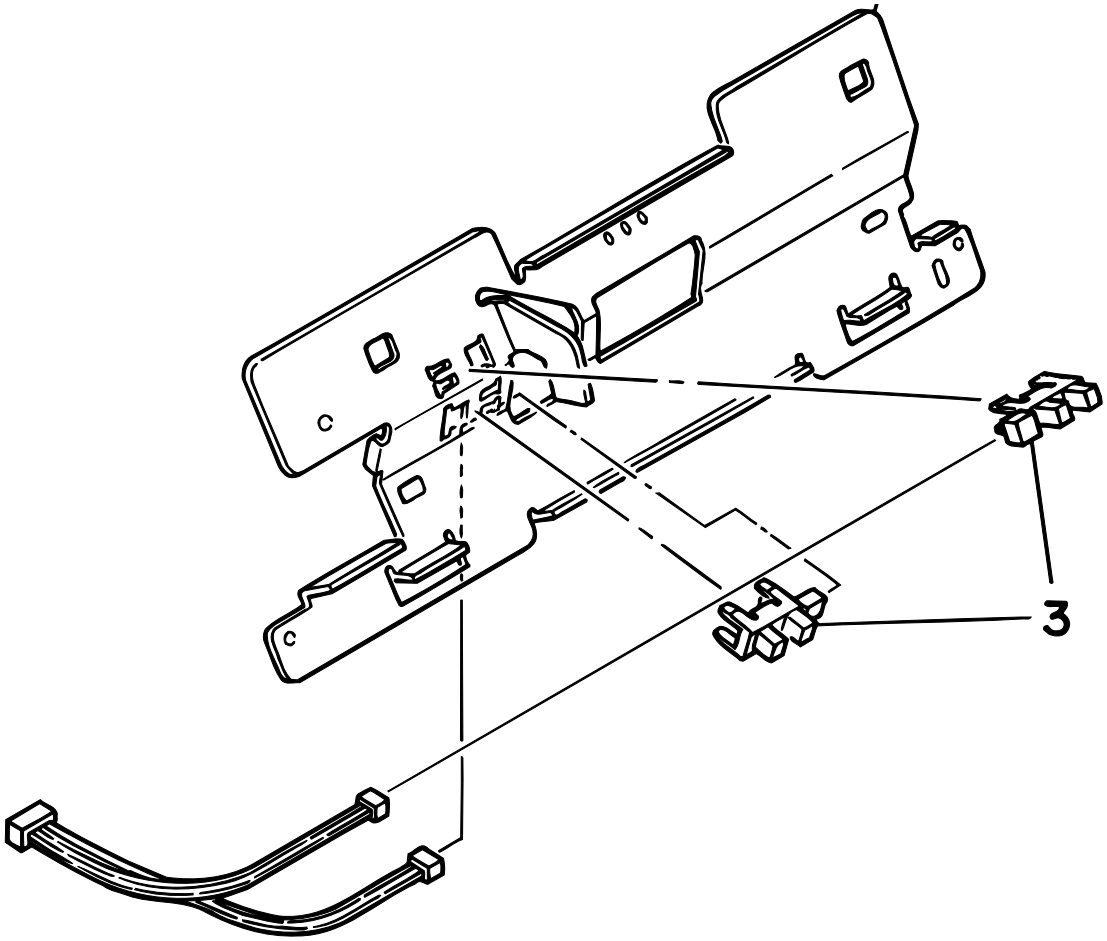

Section 6 SCANNER PLATE ASSEMBLY (B)

NR.	BEZEICHNUNG	BESTELL-NR.	BEMERKUNG
3	PHOTO SENSOR	4YB4120-1137P1	

SECTION 7 SCANNER PLATE ASSEMBLY (R)

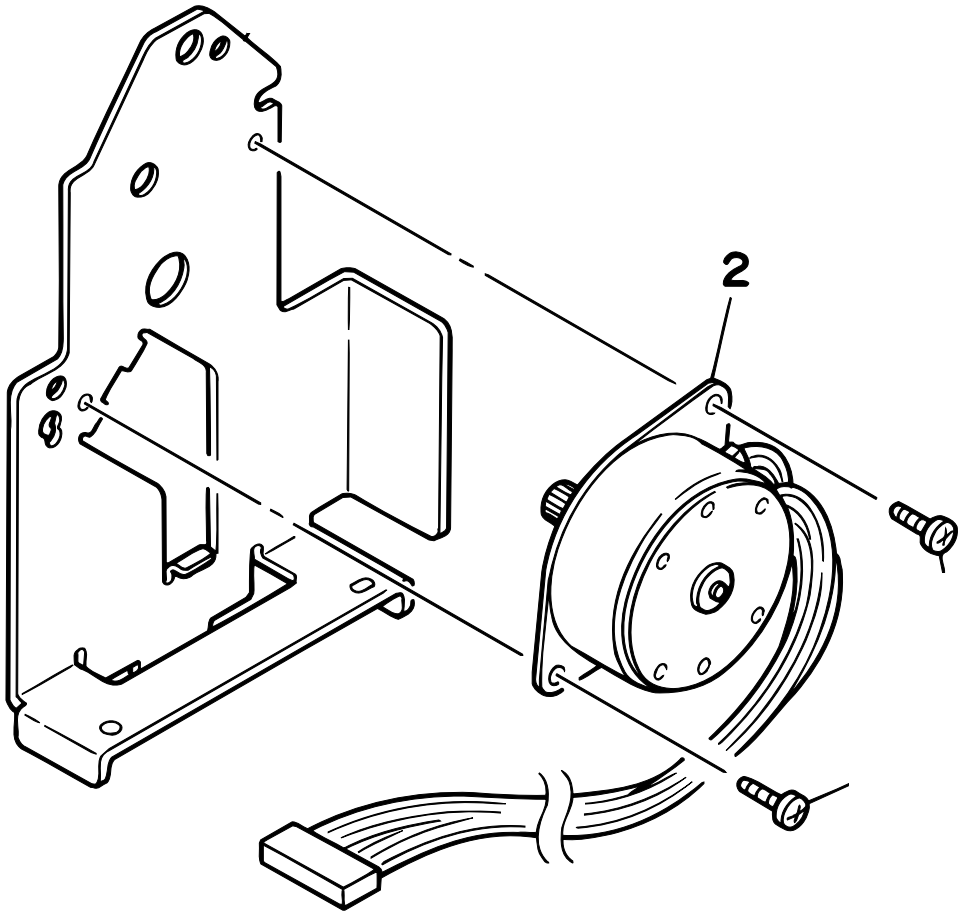

Section 7 SCANNER PLATE ASSEMBLY (R)

NR.	BEZEICHNUNG	BESTELL-NR.	BEMERKUNG
2	MOTOR - S (FX-051)	40084301	

SECTION 8 SCANNER FRAME ASSEMBLY (U)

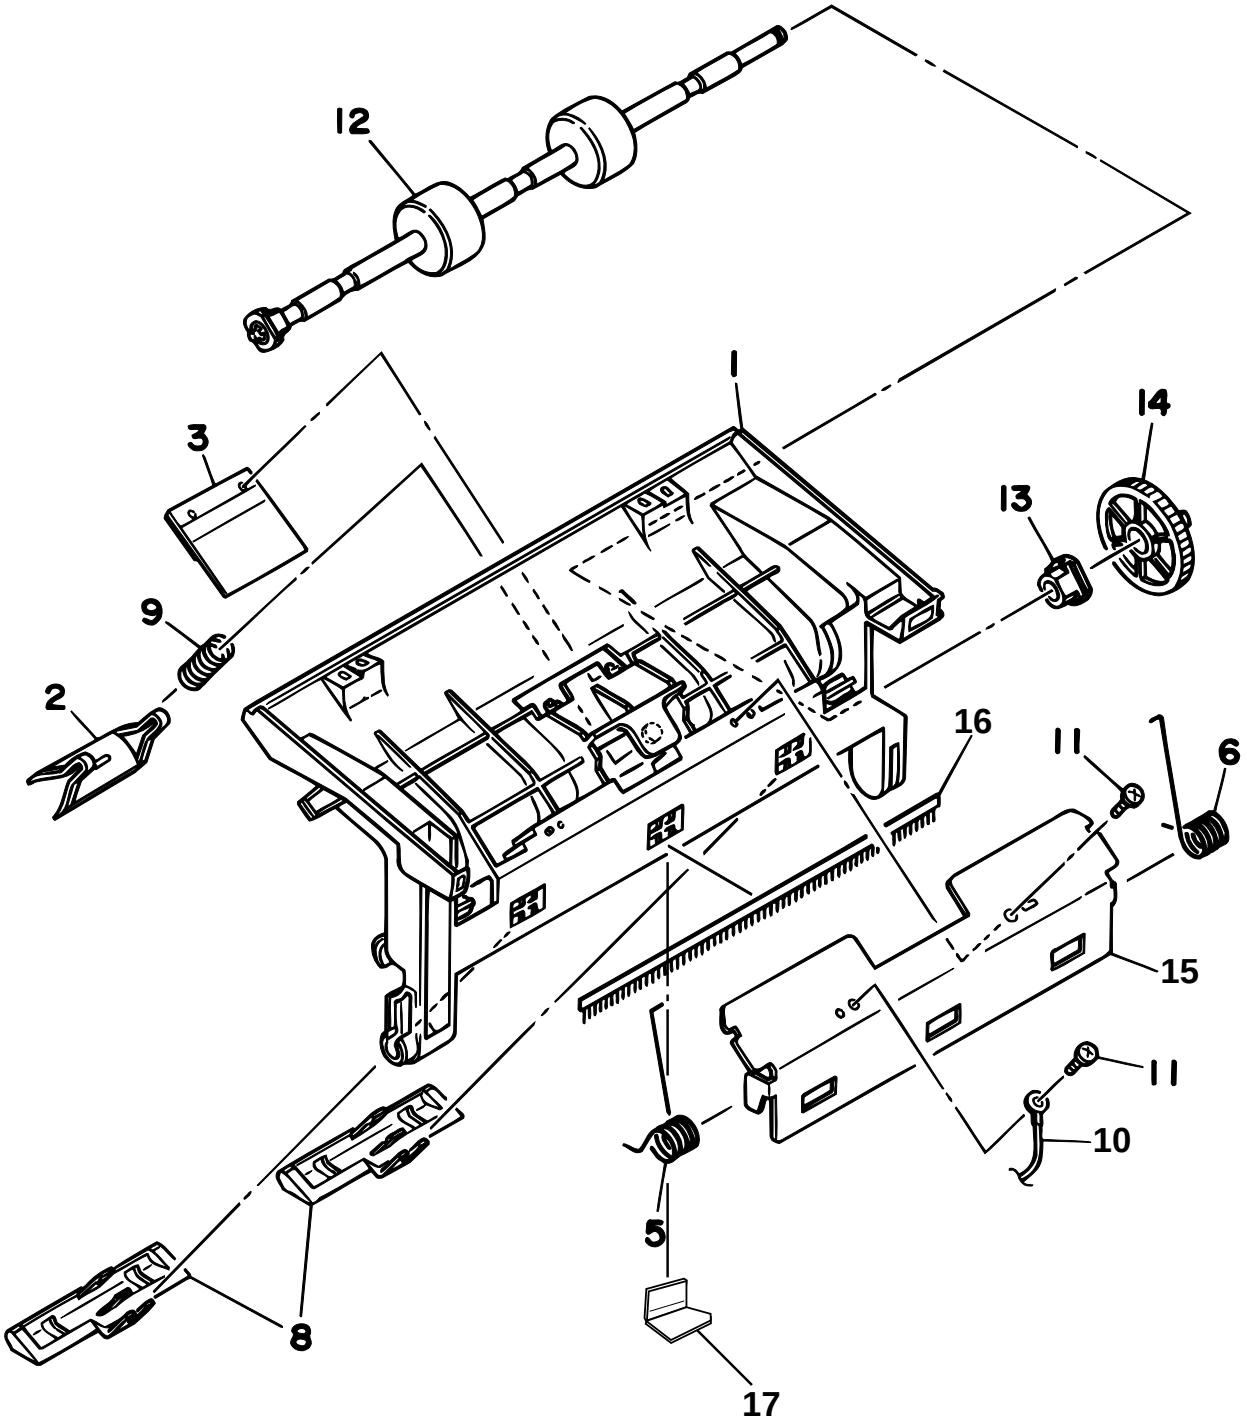

Section 8 SCANNER FRAME ASSEMBLY (U)

NR.	BEZEICHNUNG	BESTELL-NR.	BEMERKUNG
2	BACK-UP PLATE	4PP3527-5153P1	
3	SEPARATION RUBBER ASSY	40267001	
5	PINCH SPRING (L)	40021401	
6	PINCH SPRING (R)	40021501	
7	SENSOR GUIDE (A)	40745801	
8	SENSOR GUIDE (B)	40021701	
9	ADF SPRING	40481101	
12	SENSOR ROLLER ASSY	40021201	
13	BEARING - S	40022001	
14	GEAR (Z31)	40020801	
16	DISCHARGE BAR	40026301	
17	EXIT FILM	40461301	
18	GUIDE FILM	40745901	

SECTION 9 TOP COVER ASSEMBLY

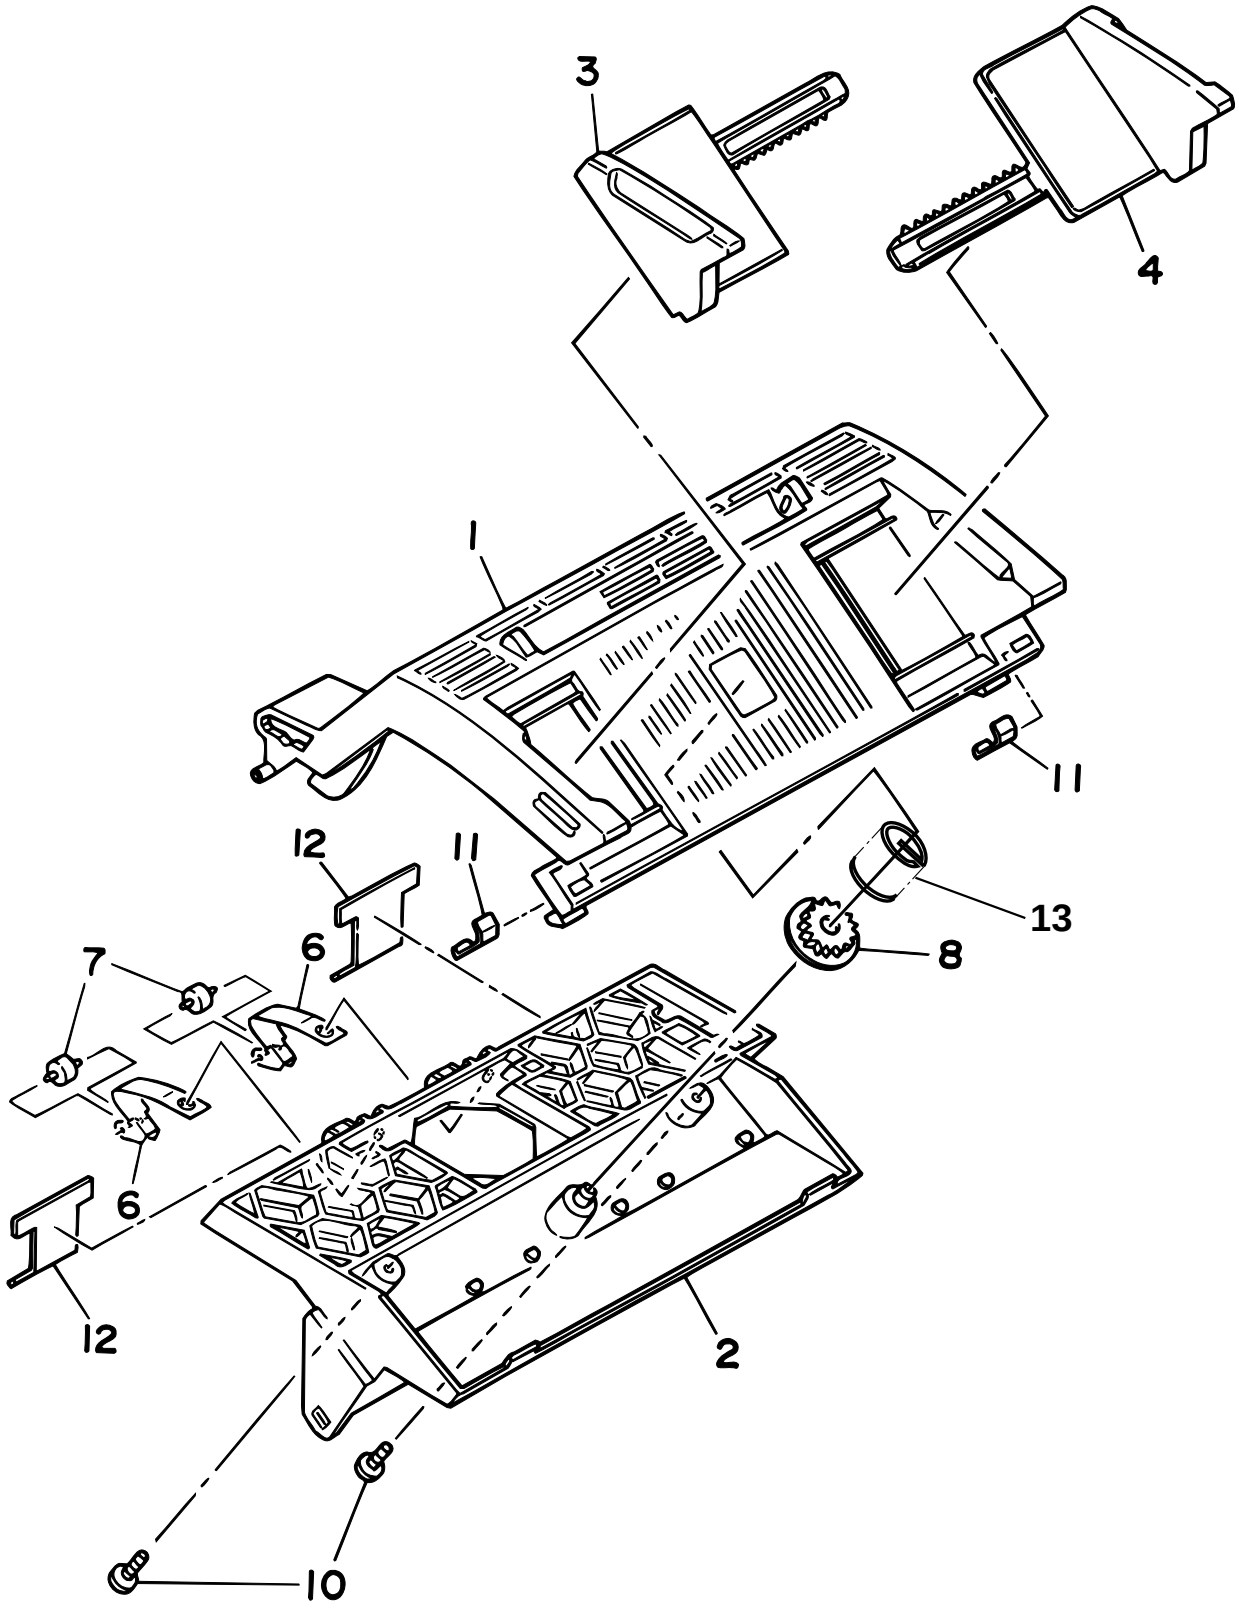

Section 9 TOP COVER ASSEMBLY

NR.	BEZEICHNUNG	BESTELL-NR.	BEMERKUNG
2	LED HOLDER	40606701	
5	SPRING D	40022601	
6	PLATE EXIT	4PP4128-1268P001	
7	EXIT ROLLER A	4PP4083-2024P1	
8	PINION GEAR B	4PP4083-2328P003	
13	SPRING D	40022601	

SECTION 10 BASE PLATE ASSEMBLY

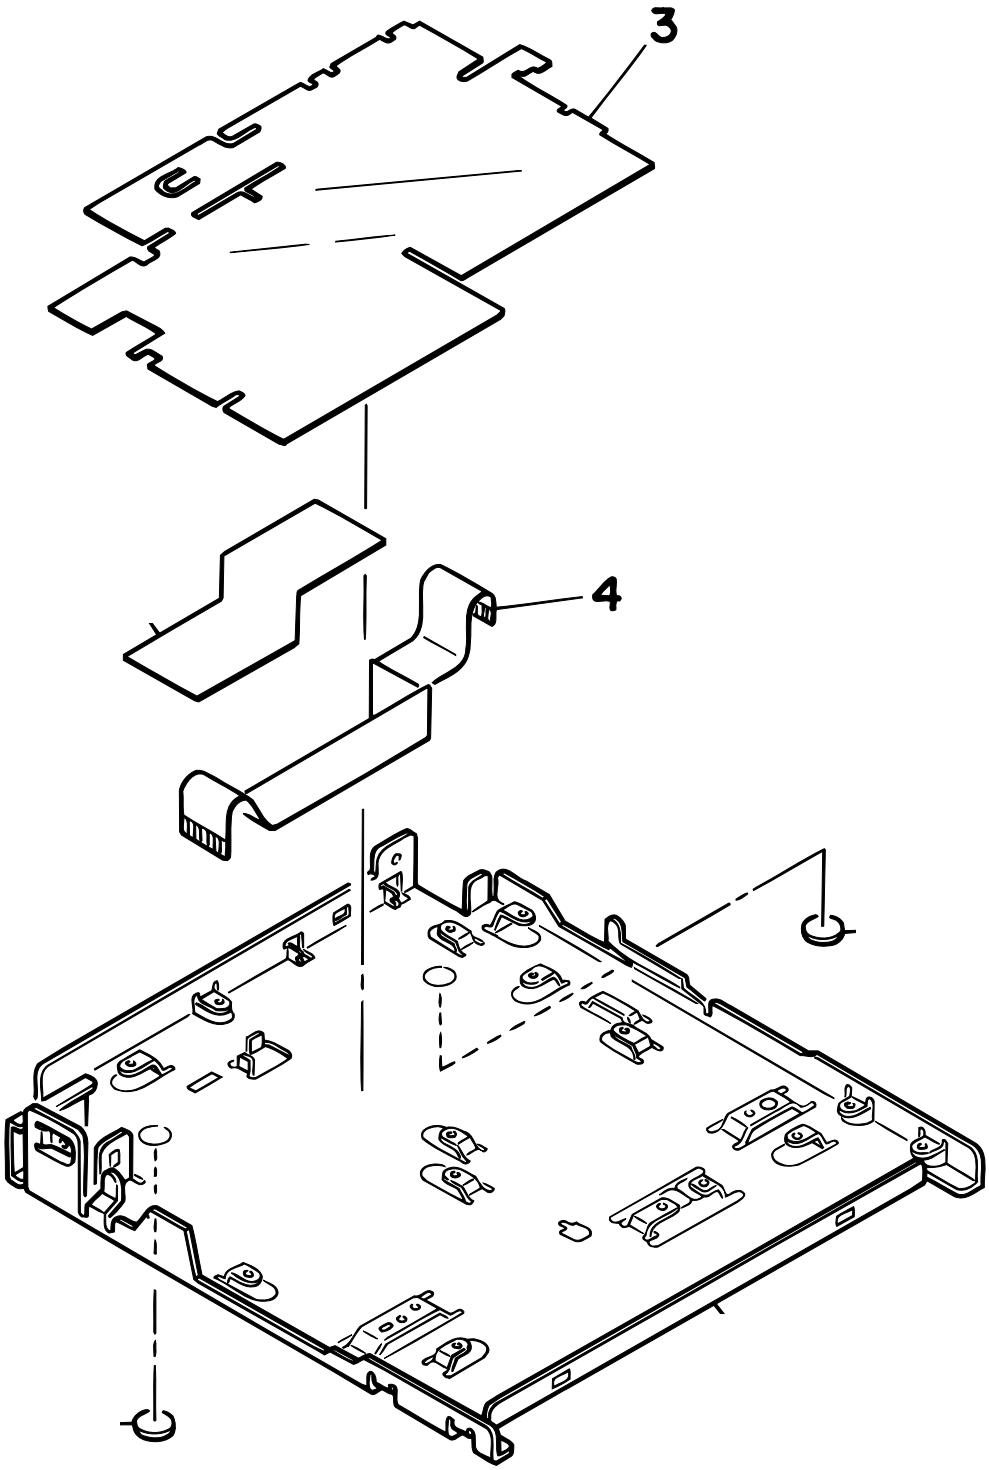

Section 10 BASE PLATE ASSEMBLY

NR.	BEZEICHNUNG	BESTELL-NR.	BEMERKUNG
3	INSULATION SHEET	40606901	
4	CORD-FALT (FUJI CARD)	40128001	

SECTION 11 PRINTER BASE FRAME UNIT

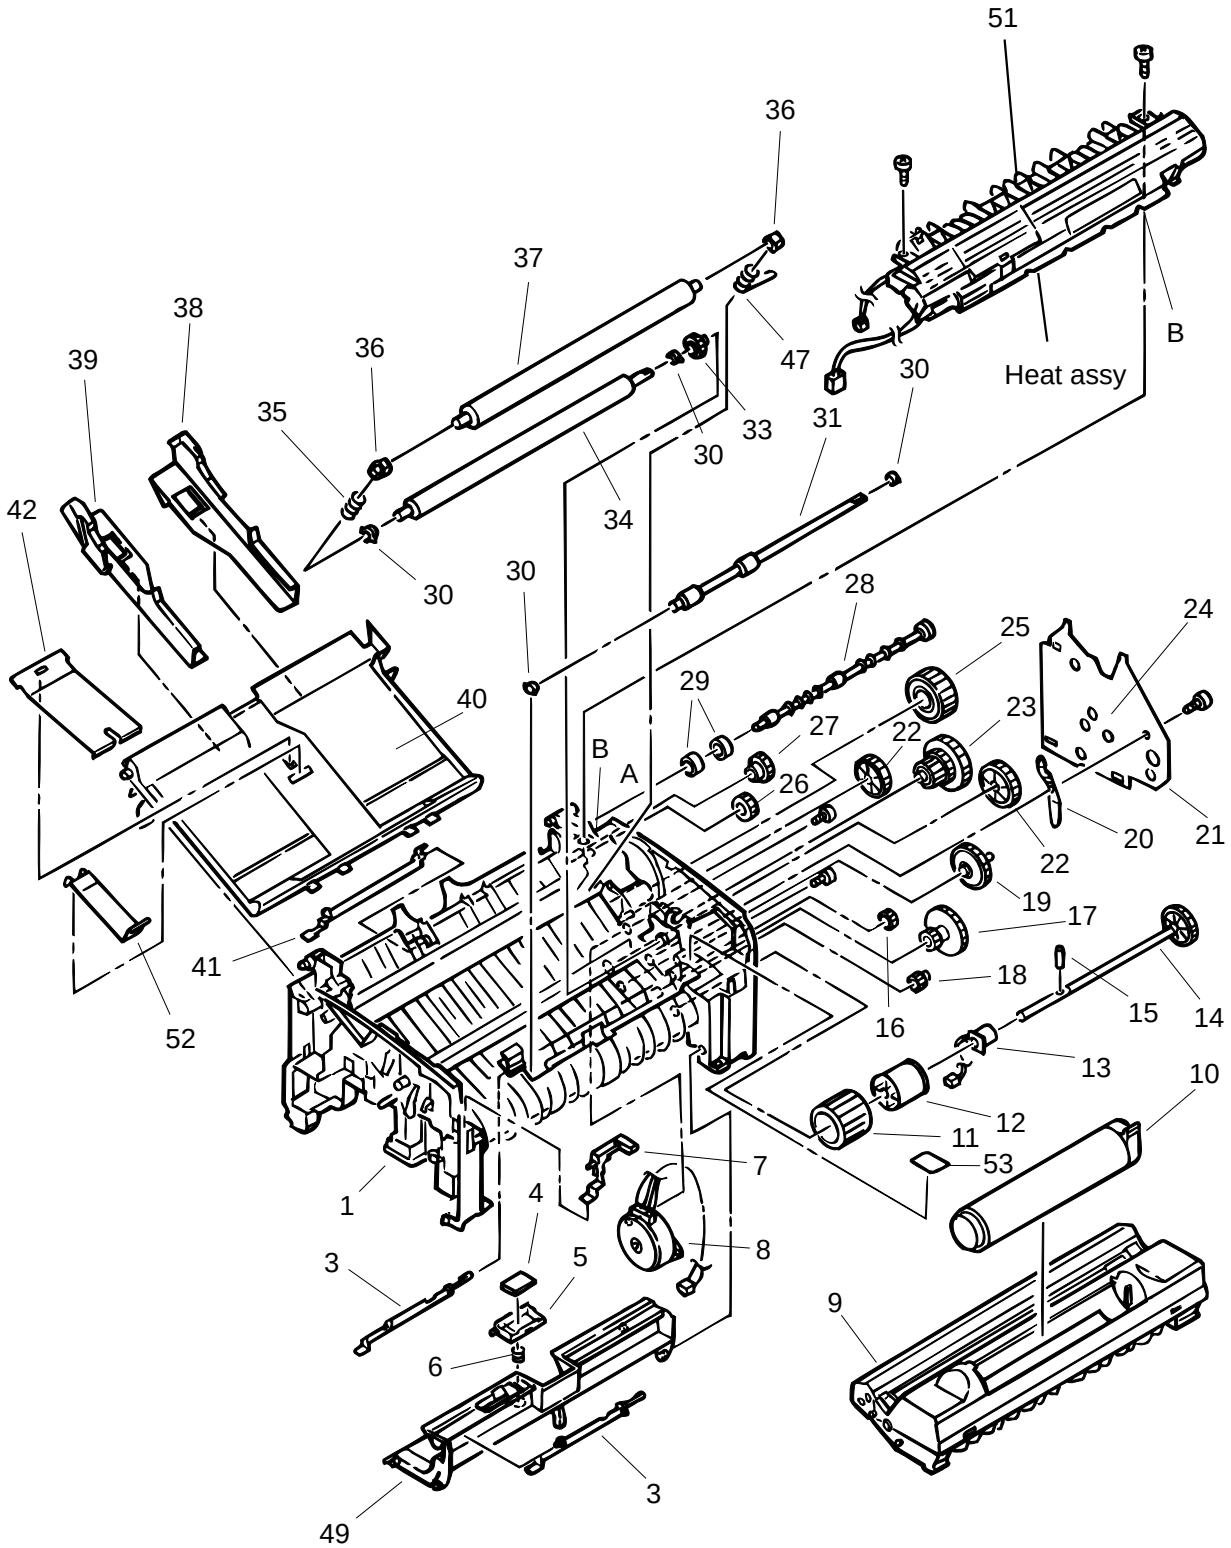

Section 11 PRINTER BASE FRAME UNIT

NR.	BEZEICHNUNG	BESTELL-NR.	BEMERKUNG
1	FRAME UNIT ASSY	40593201	
3	PAPER SENSOR E	3PP4083-1191P1	
4	SEPARATOR ASSY	40721301	
6	COMPRESSION SPRING S	40781701	
7	TONER SENSOR ASSY	3PA4083-1193G1	
8	PULSE MOTOR (MAIN)	40496401	
9	EP CARTRIDGE O P T I O N		
10	TONER CARTRIDGE O P T I O N		
11	HOPPING ROLLER	40779601	
12	ROLLER HOLDER (HOPP. ROLLER)	3PP4083-1128P1	
13	MAGNET H (HOPPING SHAFT)	3PB4083-1127P1	
14	HOPPING SHAFT ASSY	3PA4083-1133G1	
15	KNOCK PIN NK2-10-SUS		
16	IDLE GEAR R	4PP4083-1143P1	
17	IDLE GEAR 2R	3PP4083-1184P1	
18	GEAR R	3PP4083-1142P1	
19	IDLE GEAR M	2PP4083-1181P1	
20	EARTH PLATE A	3PP4083-1189P1	
21	SLIDE PLATE M	3PP4083-1188P1	
22	IDLE GEAR P	3PP4083-1182P1	
23	IDLE GEAR	3R40721001	
24	TENSION PLATE	4PP4083-1165P001	
25	IDLE GEAR HEAT	3PP4083-1185P1	
26	IDLE GEAR E (A)	4PP4083-1186P1	
27	IDLE GEAR E (B)	3PP4083-1187P1	
28	DRIVE SHAFT E (EJECT)	3PP4083-1170P1	
29	EJECT ROLLER	40074601	
30	REGISTRATION BEARING	3PP4083-1141P1	
31	REGISTRATION ROLLER	3PB4083-1140P1	
32	FILM GUIDE	4PP4083-1139P1	
33	GEAR T	40737801	
34	TRANSFER ROLLER	40713601	
35	BIAS SPRING (L)	4PP4083-1136P1	
36	BEARING BU	3PP4083-1161P1	
37	PRESSURE ROLLER B	40594601	
38	PAPER GUIDE (R)	3PP4083-1233P1	
39	PAPER GUIDE (L)	3PP4083-1232P1	
40	PAPER HOLDER	1PP4083-1231P1	
41	PAPER SENSOR EXIT	3PP4083-1192P1	
42	HOPPING SPRING	4PP4083-1247P1	
43	CB CONTACT	40638001	
44	CONN CORD HV	40638102	
46	FAN	40625401	
47	BIAS SPRING (R)	4PP4083-1137P1	
49	SHEET GUIDE	40562401	

Diese Seite bleibt aus technischen Gründen frei.

Section 11 PRINTER BASE FRAME UNIT

NR.	BEZEICHNUNG	BESTELL-NR.	BEMERKUNG
51	HEAT ASSY 120V	40592801	120V
	HEAT ASSY 230V 230V	40592802	
52	STOPPER SPRING	40034001	
53	CAUTION LABEL (TR)	4PB4091-6047P1	
54	TR WASHER	40688601	
55	GUIDE GEAR T	40710301	

SECTION 12 PRINTER HEAT ASSY

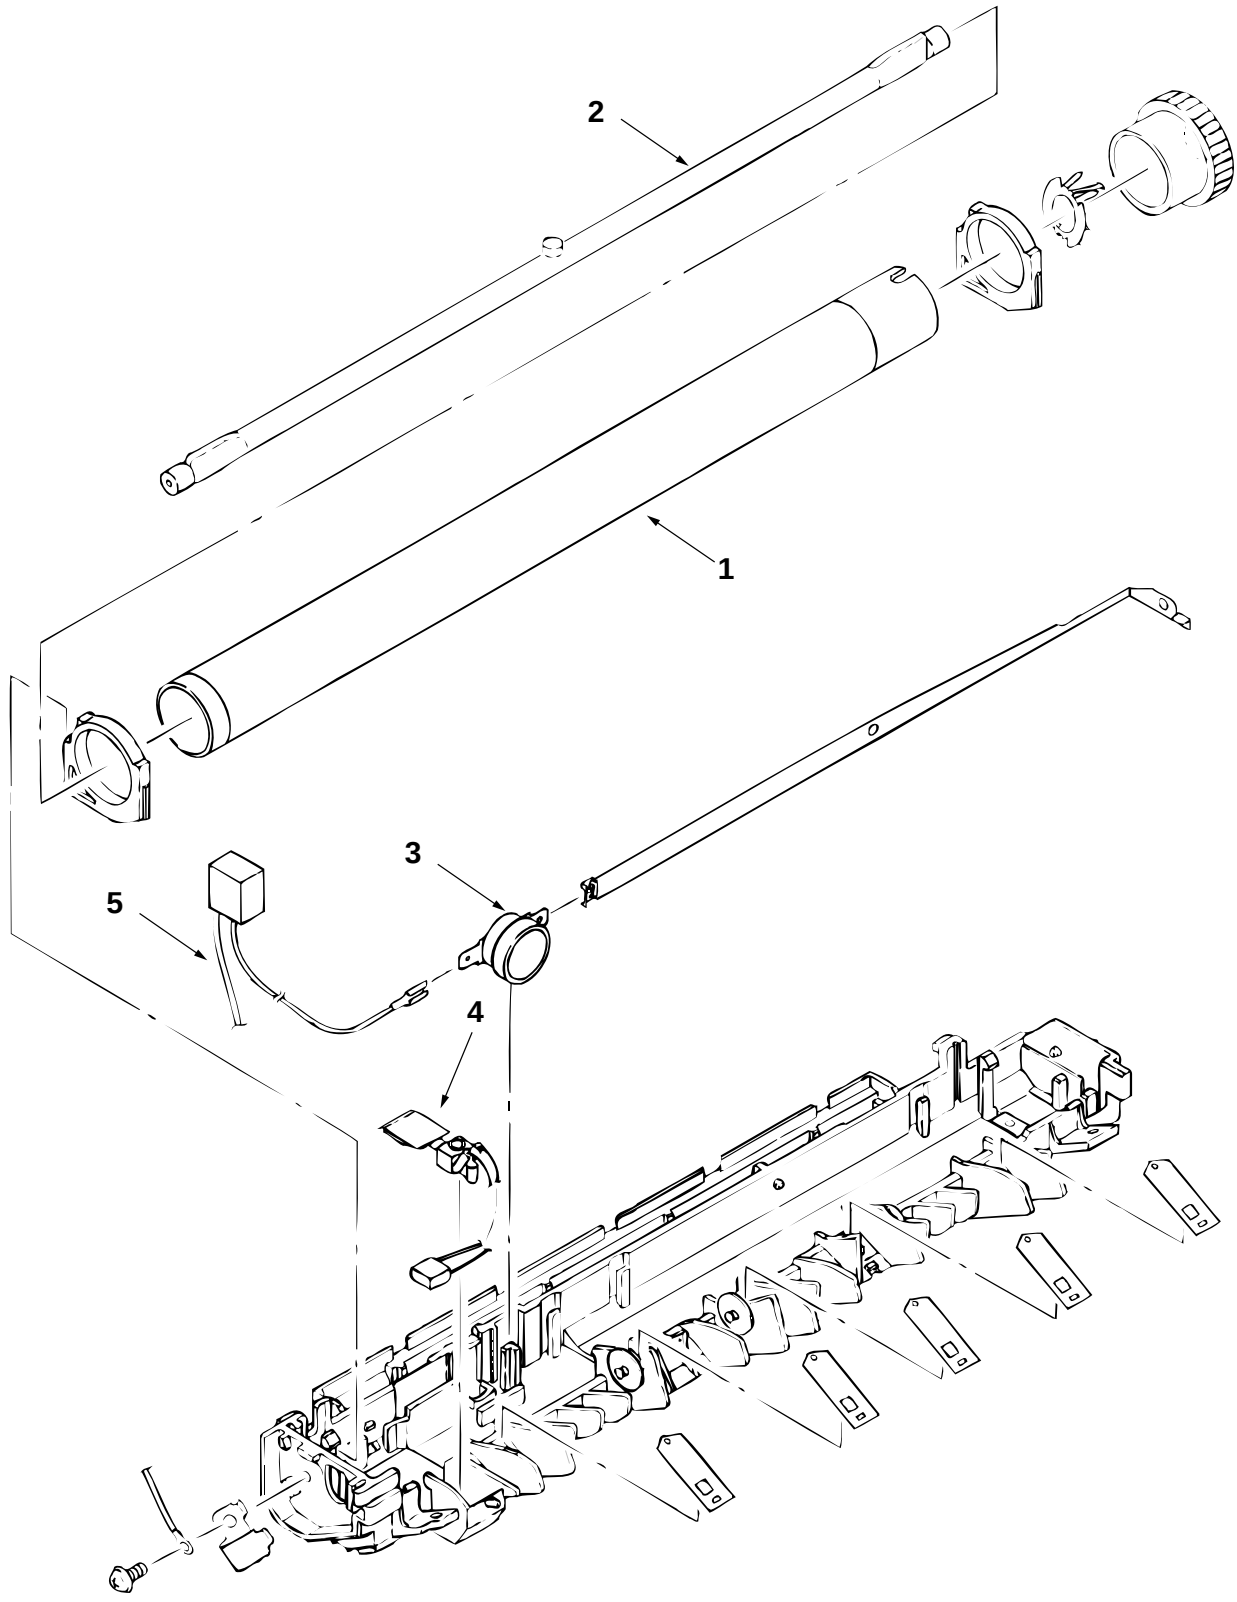

Section 12 PRINTER HEAT ASSY.

56	BEARING GEAR	40634701	
NR.	**BEZEICHNUNG**	**BESTELL-NR.**	**BEMERKUNG**
1	HEAT ROLLER	3PB4083-1202P1	
2	HALOGEN LAMP 120V	40649301	120V
	HALOGEN LAMP 230V	40649302	230V
3	THERMOSTAT	4PB4083-1204P1	
4	THERMISTOR	4PB4083-1205P1	
5	HEAT CORE 4	PB4083-1213P1	

SECTION 13 CABLES

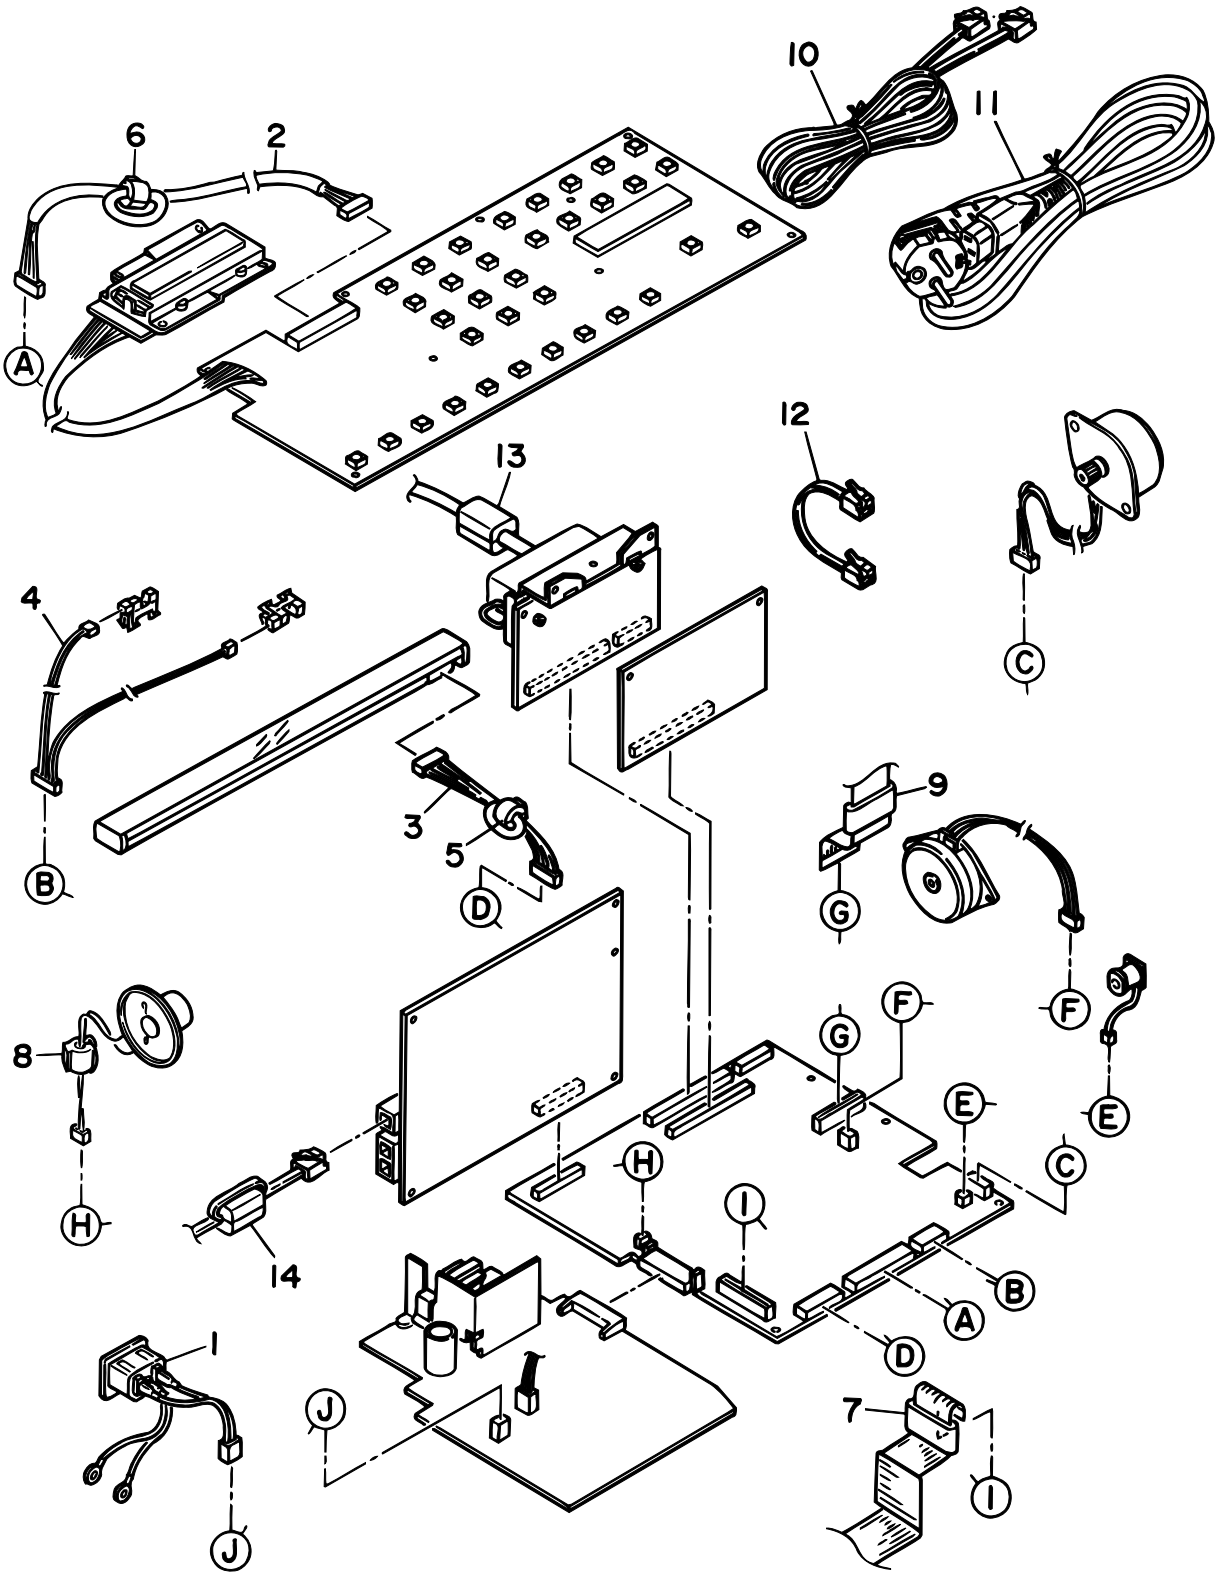

Section 13 CABLES

NR.	BEZEICHNUNG	BESTELL-NR.	BEMERKUNG
1	CONNECTION CORD WIRE (AC)	40635401	
2	CONNECTION CORD WIRE (OPE)	40040001	
3	CONNECTION CORD WIRE (CIS)	40040201	
4	CONNECTION CORD WIRE (PC1/2	40040301	
5	TF-20-10-10 CORE	105A1070C0003	
6	TF-23-11-14 CORE	105A1070C0004	
7	SSC-40-12-M CORE	105A1073C4002	
8	TFC-16813 CORE	1051070C0001	
12	CORD (TEL1-TEL2)	4YS4111-5581P1	
14	CORE SFC-8	105A1068C1004	
15	FLAT CORD (SUMI CARD)	40687701	